

LOAD BANK KPLB-6875



KEYPOWER LOAD BANK:


- * Frequency: 50/60 Hz;
- * Voltage range: AC 110-690V;
- * Duty: Continuous;
- * Cooling system: Industrial grade axle fans;
- * Discharged air direction: horizontal for 100 kw, vertical for larger models;
- * Control power phase: Single-phase, two-wire for 500 kw and below; three-phase, four-wire for larger models.

GENERAL SPECIFICATIONS

	Model	KPLB-6875
	Capacity	6875KVA / 5500kW
	Type of load	Resistive & inductive load
	Power factor	0.8 / 1.0
	Duty cycle	Continuous
	Cooling system	Industrial grade axial fan
	Cooling mode	Forced air-cooled
	Airflow	Vertical discharge
	Phase	Available at both single and three phase
	Rated testing voltage	3P3W 110 - 690V
	Rated frequency	50Hz / 60Hz
	Number of fans	16
	Control power input voltage	3P4W 220 - 480V



Dimension and Weight

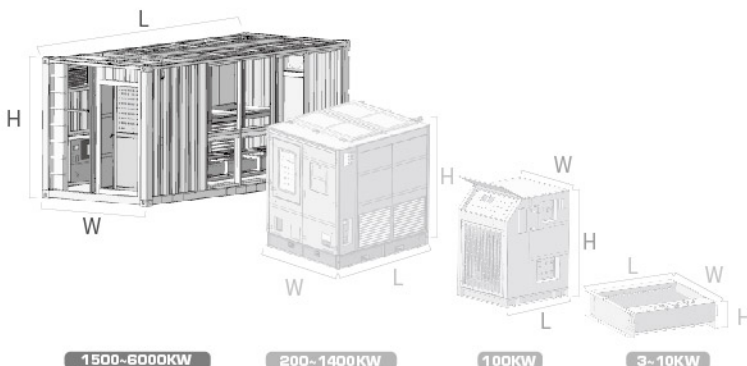

DIMENSION		KPLB-6875	
	Length (L)	mm	12192
	Width (W)	mm	2438
	Height (H)	mm	2896
	Weight	kg	34000

KEYPOWER has the right to modify any feature without prior notice. Weights and dimensions based on standard products. Illustrations may include optional equipment. Technical data described in this catalogue correspond to the available information at the moment of printing. The illustrations and images are indicative and may not coincide in their entirety with the product. Industrial design under patent.

Technical Specifications

PERFORMANCE PARAMETER	
Ambient Temperature	-10°C ~ +55°C
Relative Humidity	≤98% ventilated environment without explosive or corrosive dust
Altitude	≤3000m above sea level
Wire Connection	Socket / Terminal
Load Tolerance (each step)	±5%
Load Tolerance (overall)	±3%
Enclosure	ISO 40HC Container
Parameter measuring accuracy grade	0.5
Noise level	86 dBA @ 1m
Enclosure protection class	IP 54
Forklift handling	No

CONTROL PANEL	
Control mode (Standard)	Local manual control
Control mode (Optional)	Intelligent / remote control
Remote control distance	≤100 m
Load step	10kW*4, 20kW*3, 50kW*2, 100kW*9, 200kW*22 / 8kvar*4, 15kvar*3, 38kvar*2, 75kvar*9, 150kvar*22 (non-intelligent type) 10kW*13, 20kW*6, 50kW*7, 100kW*7, 200kW*21 / 8kvar*13, 15kvar*6, 38kvar*7, 75kvar*7, 150kvar*21 (intelligent type)
Load bank protections	Fan failure alarm/Overload alarm/Overvoltage alarm/Overheating alarm/Low airflow alarm/Maintenance door open alarm/Control power failure/Fault reset
Multi functions display	voltage, current, load power, reactive power, apparent power, power factor, frequency etc.
One-step load/unload	Yes
Emergency stop	Yes
Phase sequence indicator	Yes

Optional Items for Load Bank:




- Capacitive/Inductive/Resistive load bank with different power factor
- Intelligent control
- Laptop for remote control
- Generator tester
- Multi-voltage
- Water-proof cover for air outlet (200-1400KW)
- Air deflecting duct for containerized load bank
- Space heater
- Cable connector
- Galvanized sheet canopy
- Wheels for < 500KW load bank
- Trailer

RESISTOR FEATURES		304 STAINLESS STEEL RESISTORS
Material	Stainless steel	
Cooling mode	Forced air cooling	
Temperature resistance	500 ~ 600°C	
Load Tolerance	±5%	
Warranty	3 years with unlimited hours	

INDUCTOR FEATURES		INDUCTIVE TYPE
Insulation level	Class H	
Operating temperature	-25 ~ 60°C	
Flame retardant rating	UL94 - V0	
Surface treatment	Conformal coating	
Fastener treatment	Hot-dip galvanized	
Overall treatment	Vacuum impregnation varnish	

Generator Tester Function


GENERATOR TESTER

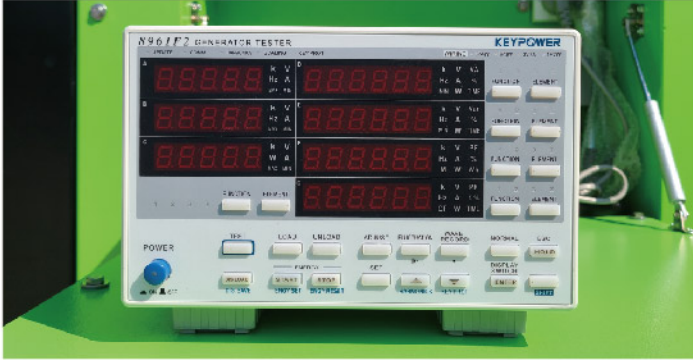


TEST REPORT

Test report of generator set's steady performance																																																																																																																																		
Source: 020202020		Date of test: 2012-11-10		Test time: 09:30:30																																																																																																																														
<table border="1"> <tr> <th>1. Set type</th> <th>1. Voltage</th> <th>2. Switch</th> <th>3. Voltage level</th> <th>4. Item No.</th> <th>5. Set Pt.</th> <th>6. Power factor</th> <th>7. Date of production</th> </tr> <tr> <td>1.1.1.1.1.1</td> <td>1.1.1.1.1.1</td> <td>1.1.1.1.1.1</td> <td>1.1.1.1.1.1</td> <td>1.1.1.1.1.1</td> <td>1.1.1.1.1.1</td> <td>1.1.1.1.1.1</td> <td>1.1.1.1.1.1</td> </tr> </table>										1. Set type	1. Voltage	2. Switch	3. Voltage level	4. Item No.	5. Set Pt.	6. Power factor	7. Date of production	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1																																																																																																									
1. Set type	1. Voltage	2. Switch	3. Voltage level	4. Item No.	5. Set Pt.	6. Power factor	7. Date of production																																																																																																																											
1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1	1.1.1.1.1.1																																																																																																																											
<table border="1"> <tr> <th>2. Test of insulation resistance</th> <th>between</th> <th>measure</th> <th>insulation</th> <th>relationship</th> <th>Test of insulation resistance between auxiliary</th> </tr> <tr> <td>2.1.1.1.1.1</td> <td>2.1.1.1.1.1</td> <td>2.1.1.1.1.1</td> <td>2.1.1.1.1.1</td> <td>2.1.1.1.1.1</td> <td>2.1.1.1.1.1</td> </tr> </table>										2. Test of insulation resistance	between	measure	insulation	relationship	Test of insulation resistance between auxiliary	2.1.1.1.1.1	2.1.1.1.1.1	2.1.1.1.1.1	2.1.1.1.1.1	2.1.1.1.1.1	2.1.1.1.1.1																																																																																																													
2. Test of insulation resistance	between	measure	insulation	relationship	Test of insulation resistance between auxiliary																																																																																																																													
2.1.1.1.1.1	2.1.1.1.1.1	2.1.1.1.1.1	2.1.1.1.1.1	2.1.1.1.1.1	2.1.1.1.1.1																																																																																																																													
<table border="1"> <tr> <th>3. Check error indicator equipment's work condition of motor speed</th> <th>check</th> <th>emergency stop</th> <th>high water temperature</th> <th>Test of high water temperature</th> </tr> <tr> <td>3.1.1.1.1.1</td> <td>3.1.1.1.1.1</td> <td>3.1.1.1.1.1</td> <td>3.1.1.1.1.1</td> <td>3.1.1.1.1.1</td> </tr> </table>										3. Check error indicator equipment's work condition of motor speed	check	emergency stop	high water temperature	Test of high water temperature	3.1.1.1.1.1	3.1.1.1.1.1	3.1.1.1.1.1	3.1.1.1.1.1	3.1.1.1.1.1																																																																																																															
3. Check error indicator equipment's work condition of motor speed	check	emergency stop	high water temperature	Test of high water temperature																																																																																																																														
3.1.1.1.1.1	3.1.1.1.1.1	3.1.1.1.1.1	3.1.1.1.1.1	3.1.1.1.1.1																																																																																																																														
<table border="1"> <thead> <tr> <th>month</th> <th>power (kW)</th> <th>voltage (V)</th> <th>current (A)</th> <th>power factor</th> <th>frequency (Hz)</th> <th>steady time (min)</th> <th>steady time (min)</th> <th>voltage adjustment range</th> <th>frequency adjustment range</th> <th>voltage regulation (%)</th> </tr> </thead> <tbody> <tr> <td>10%</td> <td>1000</td> <td>400</td> <td>1500</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> <tr> <td>20%</td> <td>2000</td> <td>400</td> <td>3000</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> <tr> <td>30%</td> <td>3000</td> <td>400</td> <td>4500</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> <tr> <td>40%</td> <td>4000</td> <td>400</td> <td>6000</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> <tr> <td>50%</td> <td>5000</td> <td>400</td> <td>7500</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> <tr> <td>60%</td> <td>6000</td> <td>400</td> <td>9000</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> <tr> <td>70%</td> <td>7000</td> <td>400</td> <td>10500</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> <tr> <td>80%</td> <td>8000</td> <td>400</td> <td>12000</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> <tr> <td>90%</td> <td>9000</td> <td>400</td> <td>13500</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> <tr> <td>100%</td> <td>10000</td> <td>400</td> <td>15000</td> <td>0.8</td> <td>50</td> <td>10</td> <td>10</td> <td>0-100</td> <td>0-100</td> <td>0.5</td> </tr> </tbody> </table>										month	power (kW)	voltage (V)	current (A)	power factor	frequency (Hz)	steady time (min)	steady time (min)	voltage adjustment range	frequency adjustment range	voltage regulation (%)	10%	1000	400	1500	0.8	50	10	10	0-100	0-100	0.5	20%	2000	400	3000	0.8	50	10	10	0-100	0-100	0.5	30%	3000	400	4500	0.8	50	10	10	0-100	0-100	0.5	40%	4000	400	6000	0.8	50	10	10	0-100	0-100	0.5	50%	5000	400	7500	0.8	50	10	10	0-100	0-100	0.5	60%	6000	400	9000	0.8	50	10	10	0-100	0-100	0.5	70%	7000	400	10500	0.8	50	10	10	0-100	0-100	0.5	80%	8000	400	12000	0.8	50	10	10	0-100	0-100	0.5	90%	9000	400	13500	0.8	50	10	10	0-100	0-100	0.5	100%	10000	400	15000	0.8	50	10	10	0-100	0-100	0.5
month	power (kW)	voltage (V)	current (A)	power factor	frequency (Hz)	steady time (min)	steady time (min)	voltage adjustment range	frequency adjustment range	voltage regulation (%)																																																																																																																								
10%	1000	400	1500	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
20%	2000	400	3000	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
30%	3000	400	4500	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
40%	4000	400	6000	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
50%	5000	400	7500	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
60%	6000	400	9000	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
70%	7000	400	10500	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
80%	8000	400	12000	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
90%	9000	400	13500	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
100%	10000	400	15000	0.8	50	10	10	0-100	0-100	0.5																																																																																																																								
<table border="1"> <tr> <th>month</th> <th>power (kW)</th> <th>steady time (min)</th> <th>current (A)</th> <th>steady time (min)</th> <th>frequency (Hz)</th> <th>frequency adjustment range</th> <th>frequency adjustment range</th> </tr> <tr> <td>10%</td> <td>1000</td> <td>10</td> <td>1500</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> <tr> <td>20%</td> <td>2000</td> <td>10</td> <td>3000</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> <tr> <td>30%</td> <td>3000</td> <td>10</td> <td>4500</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> <tr> <td>40%</td> <td>4000</td> <td>10</td> <td>6000</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> <tr> <td>50%</td> <td>5000</td> <td>10</td> <td>7500</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> <tr> <td>60%</td> <td>6000</td> <td>10</td> <td>9000</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> <tr> <td>70%</td> <td>7000</td> <td>10</td> <td>10500</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> <tr> <td>80%</td> <td>8000</td> <td>10</td> <td>12000</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> <tr> <td>90%</td> <td>9000</td> <td>10</td> <td>13500</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> <tr> <td>100%</td> <td>10000</td> <td>10</td> <td>15000</td> <td>10</td> <td>50</td> <td>0-100</td> <td>0-100</td> </tr> </table>										month	power (kW)	steady time (min)	current (A)	steady time (min)	frequency (Hz)	frequency adjustment range	frequency adjustment range	10%	1000	10	1500	10	50	0-100	0-100	20%	2000	10	3000	10	50	0-100	0-100	30%	3000	10	4500	10	50	0-100	0-100	40%	4000	10	6000	10	50	0-100	0-100	50%	5000	10	7500	10	50	0-100	0-100	60%	6000	10	9000	10	50	0-100	0-100	70%	7000	10	10500	10	50	0-100	0-100	80%	8000	10	12000	10	50	0-100	0-100	90%	9000	10	13500	10	50	0-100	0-100	100%	10000	10	15000	10	50	0-100	0-100																																	
month	power (kW)	steady time (min)	current (A)	steady time (min)	frequency (Hz)	frequency adjustment range	frequency adjustment range																																																																																																																											
10%	1000	10	1500	10	50	0-100	0-100																																																																																																																											
20%	2000	10	3000	10	50	0-100	0-100																																																																																																																											
30%	3000	10	4500	10	50	0-100	0-100																																																																																																																											
40%	4000	10	6000	10	50	0-100	0-100																																																																																																																											
50%	5000	10	7500	10	50	0-100	0-100																																																																																																																											
60%	6000	10	9000	10	50	0-100	0-100																																																																																																																											
70%	7000	10	10500	10	50	0-100	0-100																																																																																																																											
80%	8000	10	12000	10	50	0-100	0-100																																																																																																																											
90%	9000	10	13500	10	50	0-100	0-100																																																																																																																											
100%	10000	10	15000	10	50	0-100	0-100																																																																																																																											

FREQUENCY AND VOLTAGE CURVES

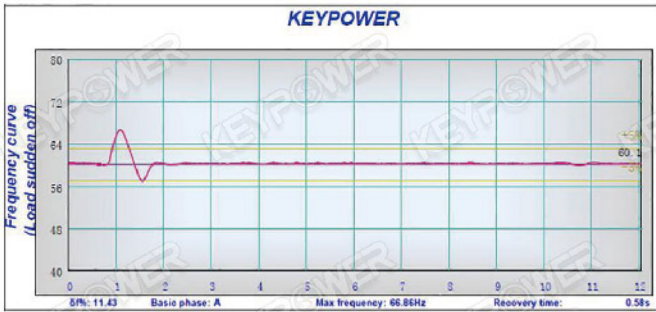


HARMONIC CURVE

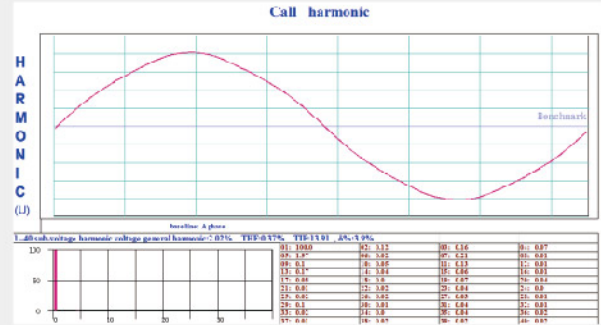

This generator tester can measure most electric parameters of a single-phase or three-phase AC generator. The standards it complied with are GB/T 2820-1997 and GB 2820-90. The signal frequency can be measured varies from 45 Hz to 65Hz. You can select one wiring mode from four modes – 1Φ2W, 3Φ3W, 3Φ4W and 3V3A. The following table shows the parameters: It's the best way to replicate, prove and verify the real-life demands on critical power systems.

MEASUREMENT MODE	PARAMETERS
Normal	Voltage, Current, Active Power, Reactive Power, Apparent Power, Power Factor, Frequency, Energy runtime, Imbalance degree of Voltage
Harmonic	Voltage & Current: 2~50th order and the THD (Total harmonic distortion)
Adjustment	In 100 seconds: Records the maximum & minimum value of Voltage & Frequency. Calculates the increase & decrease range of Voltage & Frequency and the percentage of adjustment.
Fluctuation	In 60 seconds: Records the maximum & minimum value of Voltage & Frequency. Calculates the NORMAL frequency rang, NORMAL voltage offset, voltage modulation, percentage of fluctuation and frequency.
Load	In 12 seconds: Records the minimum value of Voltage & Frequency. Records the maximum value of Current and the recovery time. Calculates the offset of Voltage & Frequency.
Unload	In 12 seconds: Records the maximum value of Voltage & Frequency. Record the minimum value of Current and the recovery time. Calculates the offset of Voltage & Frequency.
Wave Record	Records the real-time voltage waves by five optional modes. The recording time is between 5 seconds and 5 minutes by different modes.

Control Panel

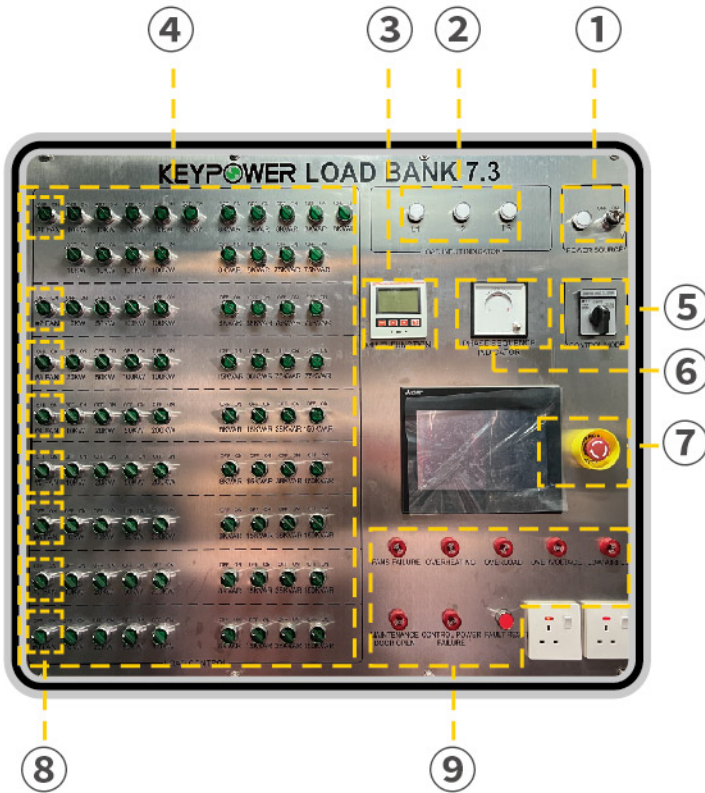

MANUAL CONTROL	FUNCTION
① Turn on / off power source	Tested power source input
② Load input indicator	Indicate U V W load input normal or not
③ Multi-function meter	Show testing parameters
④ Master load on / off	One step loading / unloading
⑤ Control mode selection	Choose control mode: Local manual control / Touch screen control / Remote control
⑥ Phase sequence indicator	Indicate phase sequence of tested power right or not
⑦ Emergency stop button	Emergency stop
⑧ Load Steps	Loading / unloading
⑨ Alarm	Load bank protection: Fan failure alarm / Overload alarm / Overvoltage alarm / Overheating alarm / Low airflow alarm / Maintenance door open alarm / Control power failure

In addition to all manual control functions, Intelligent/remote control also contains the following functions:

- Touch screen control/remote control
- Auto loading/unloading test
- Data setting

Intelligent control system with **Mitsubishi**[®] PLC



KEYPOWER Fuzhou GFF KEYPOWER Equipment Co., Ltd.

MANUAL	LL VOLTAGE	CURRENT	P / Q / S / POWER
MANUAL	U _{ab} 0 V	I _a 0 A	P 0 KW COSφ 0.00
	U _{bc} 0 V	I _b 0 A	Q 0 KVAR FPF 0.0 HZ
	U _{ca} 0 V	I _c 0 A	S 0 KVA ON LOAD 0 MIN

AUTO **AUTO**

RATED POWER: 1000 KW

LOAD SETTING

START PAUSE STOP

PF CHOICE: PF=1.0 PF=0.8

ALARM

ON LOAD DURATION

OFF LOAD DURATION

Intelligent Control Interface